


MOVO S

Installation manual

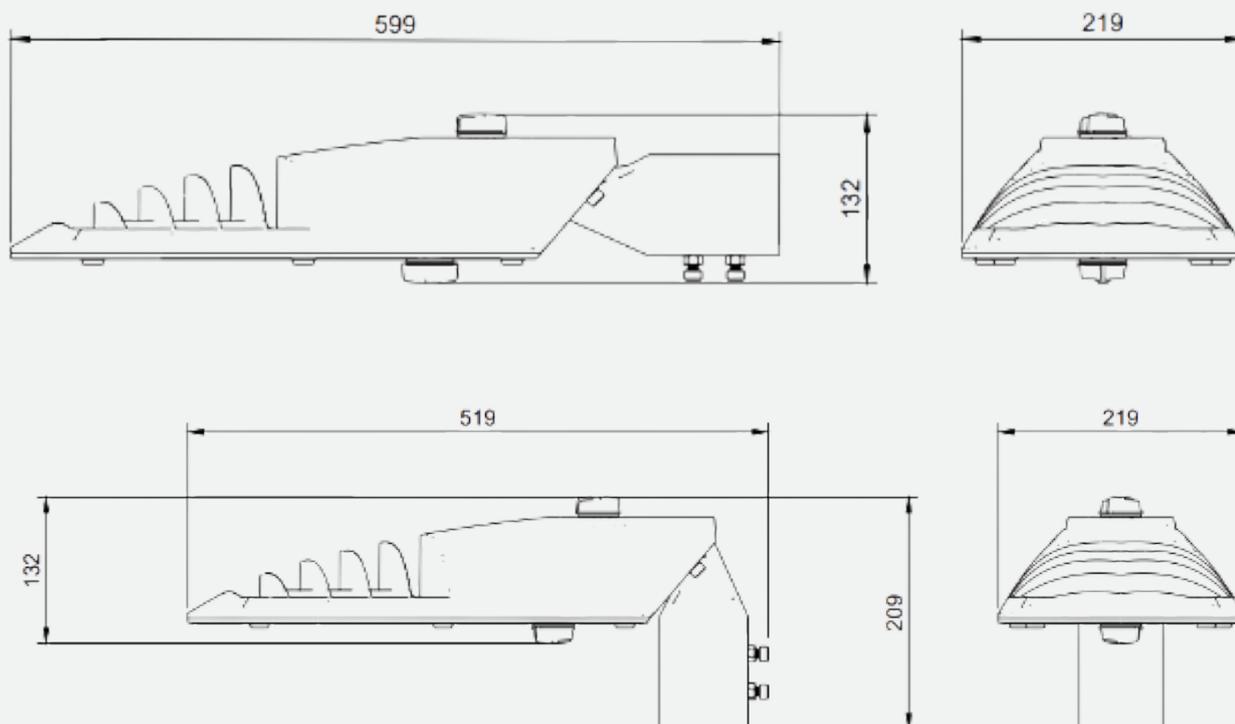

| | MOVO S |
|-------------------------------|---------------------------------------|
| Luminous flux | up to 7750 lm |
| Consumption | 10 - 45 W |
| Rated voltage | 220-240VAC / 50-60Hz |
| CCT, CRI | CCT 2700/3000K/4000K; RA>70/RA>80 |
| Dimensions | 599 x 219 x 112 mm/519 x 219 x 191 mm |
| Working temperature | -40° +45° C |
| System Efficacy | 145(±7%)LM/W(CCT=4000K, CRI>70) |
| Power factor | >0.95 |
| Net weight | 4.5 kg |
| Ambient humidity range | 15%~90%RH |




Service QR tag

The luminaire is provided with three service tags. One is mounted in the luminaire housing. One should be mounted behind the pole door. One should be attached to the documentation.



MOV0 S

Pole mount (adjustable angle)

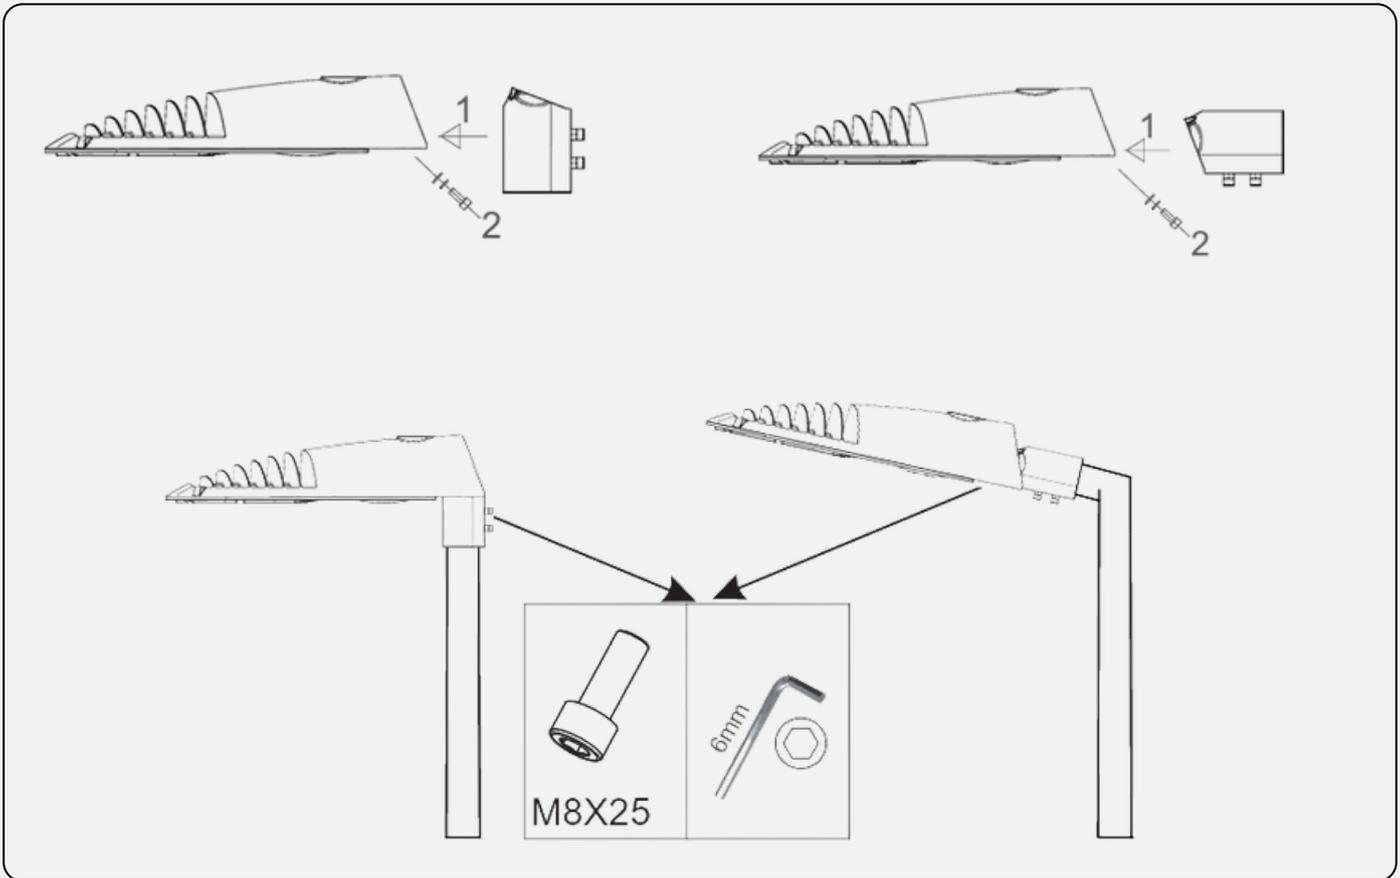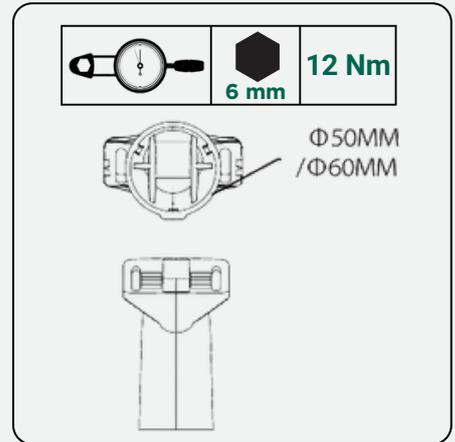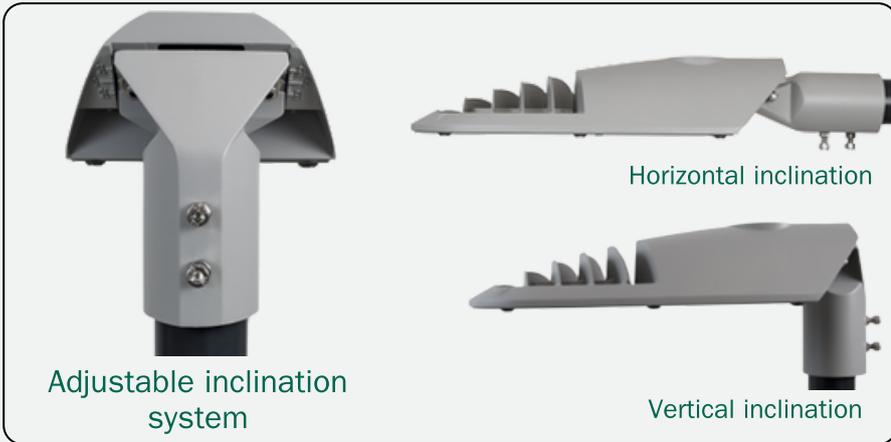

MOVOS

Wiring diagram




*NOTE! Ground connection applies to protection class I luminaires.



Warning, risk of electric shock.

A. Class I Standard

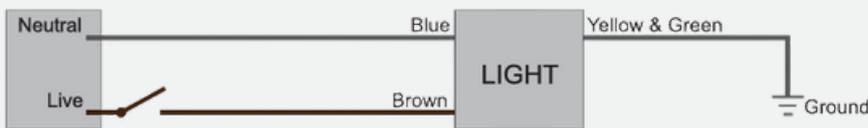

A. Class II Standard



Wiring:

1. Connect supply wires to luminaire wire leads per the wiring diagram using methods that comply with all applicable codes.
2. Turn power on.

The luminaire shall only be repaired or maintained by the manufacturer or his service agent or a qualified electrician.

Warning

1. To avoid damage, falling, electric shock or fire, please do not modify the lamp or replace accessories without confirming with the supplier first.
2. Please authorize only qualified personnel to install the lamp and ensure they follow the instruction manual. Any improper installation might cause falling, electric shock, fire, or other injury, damage or hazard.
3. Please disconnect power before installation or any maintenance of the lamp.
4. Please disconnect power if it begins to smoke or emit odors, since fire or electric shock may occur. Ask qualified person to inspect and maintain the luminaire.
5. Please do not dismantle the lamp without the supplier's authorization.
6. Please do not touch the power supply when the lamp is operating.
7. If the external flexible cable or cord of the luminaire is damaged, it should only be replaced by the supplier, a service agent or qualified person.

SAFETY AND INSTALLATION INSTRUCTIONS Read these instructions carefully before commencing installation and retain for future reference. The luminaire should be installed by a licensed electrician and in accordance with local regulations. Make sure that the power is off before installation or maintenance. Install as described in this manual. **To maximize life span, install the luminaires and the drivers as far away from heat sources as possible and in a well ventilated area.** Use the supplied cable and driver for best function and safety.

NOTE: The light source in this luminaire may only be replaced by the manufacturer or by qualified personnel designated by the manufacturer. Never regulate the power on the secondary side, this can damage or destroy the LED. Faulty installation may void warranty. When installing in wet areas, the driver must be placed in a dry zone.