


MOVO

Installation manual

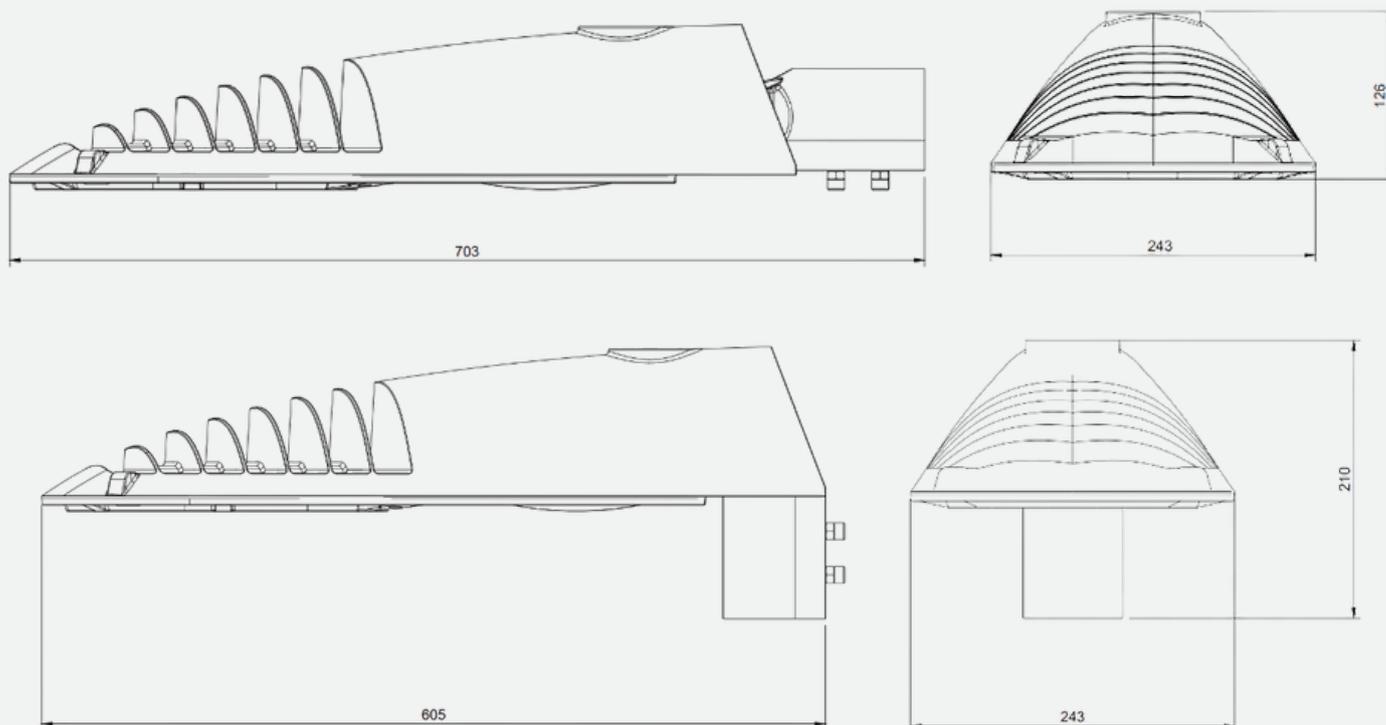

| | MOVO |
|-------------------------------|---|
| Luminous flux | Up to 14500 lm |
| Consumption | 10 - 100 W |
| Rated voltage | 220-240VAC / 50-60Hz |
| CCT, CRI | CCT 2700/3000K/4000K; RA>70/RA>80 |
| Dimensions | 703 x 243 x 128 mm |
| Working temperature | -40° +50° C (≤ 30W) -40° +45° C (31W - 50W) -40° +40° C (51W - 100W) |
| System Efficacy | 145(±5%)LM/W(CCT=4000K, CRI>70) |
| Power factor | >0.95 |
| Net weight | 6.7 kg |
| Ambient humidity range | 15%~90%RH |




Service QR tag

The luminaire is provided with three service tags. One is mounted in the luminaire housing. One should be mounted behind the pole door. One should be attached to the documentation.



MOVO

Pole mount (adjustable angle)

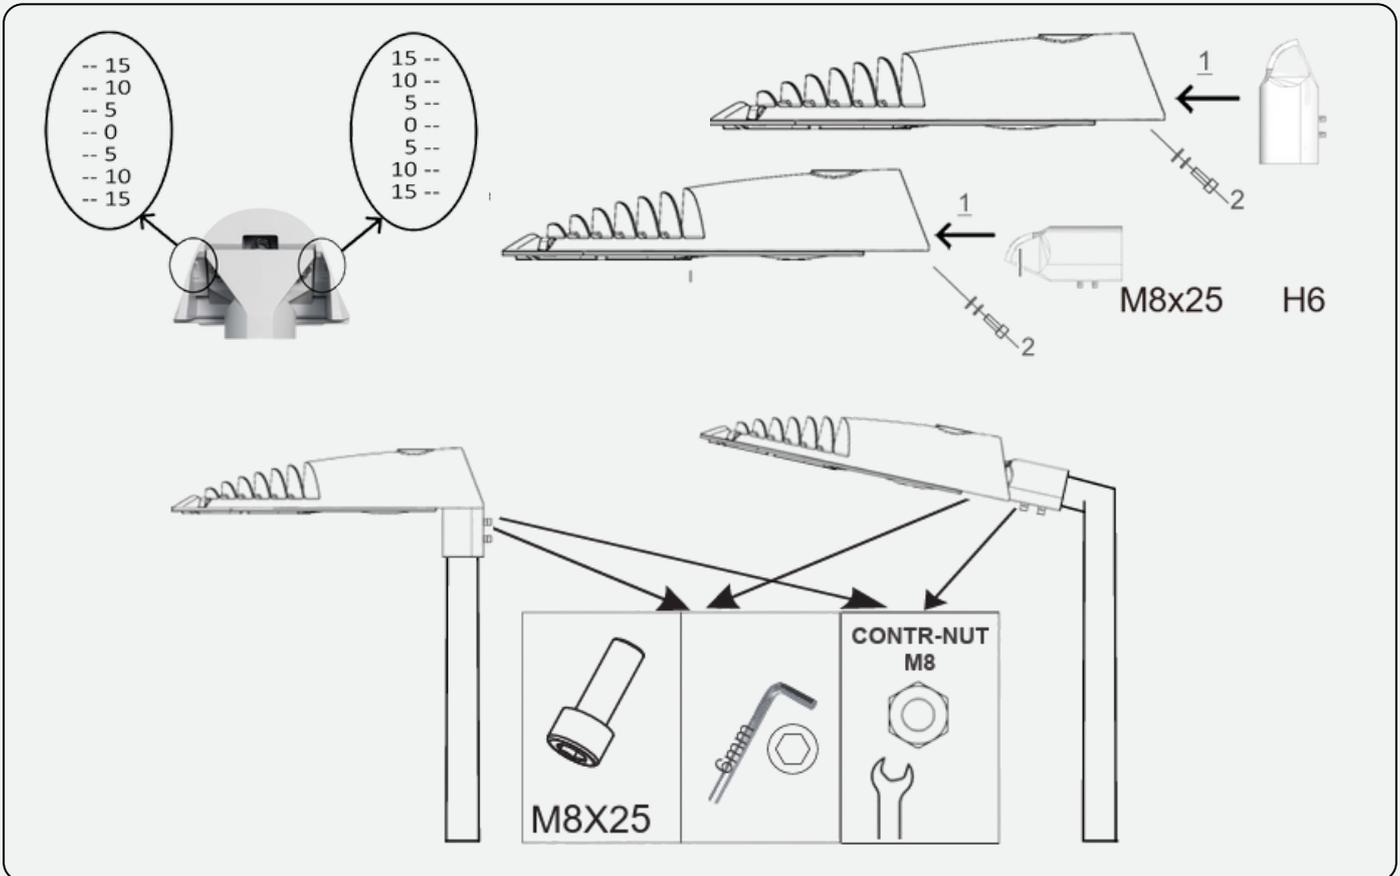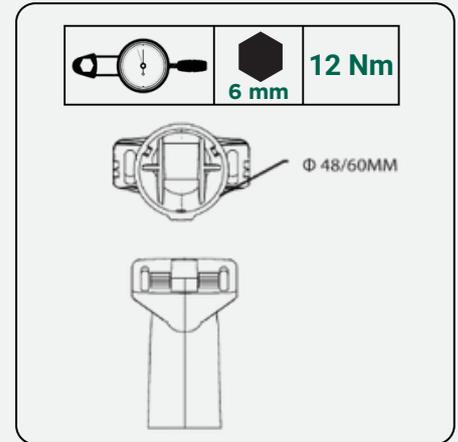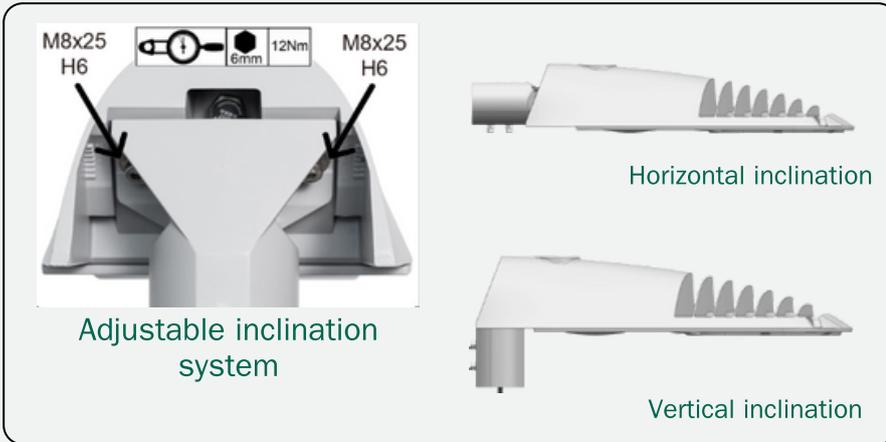

If the external flexible cable or cord of this luminaire is damaged, it shall be exclusively replaced by the manufacturer or his service agent or a similar qualified person in order to avoid a hazard.

The light source contained in this luminaire shall only be replaced by the manufacturer or his service agent or a similar qualified person.

Wiring diagram




*NOTE! Ground connection applies to protection class I luminaires.




Warning, risk of electric shock.

Class I

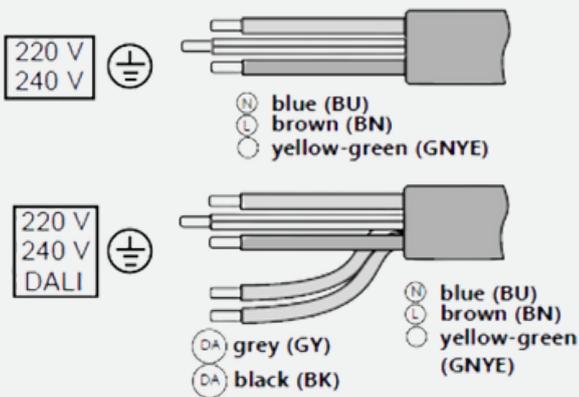

Class II

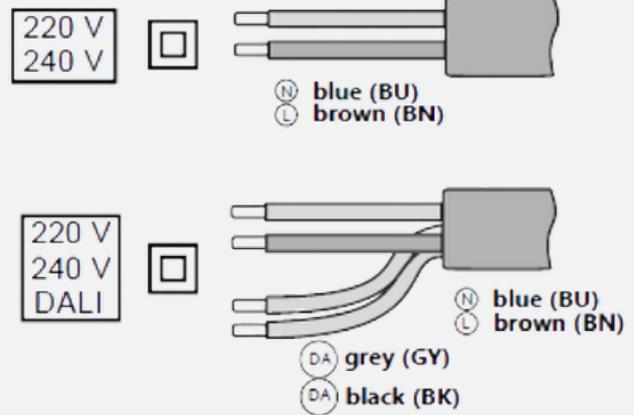

Conductors rated according to the supply voltage must be used in the DALI control circuit.

SAFETY AND INSTALLATION INSTRUCTIONS Read these instructions carefully before commencing installation and retain for future reference. The luminaire should be installed by a licensed electrician and in accordance with local regulations. Make sure that the power is off before installation or maintenance. Install as described in this manual. **To maximize life span, install the luminaires and the drivers as far away from heat sources as possible and in a well ventilated area.** Use the supplied cable and driver for best function and safety.

NOTE: The light source in this luminaire may only be replaced by the manufacturer or by qualified personnel designated by the manufacturer. Never regulate the power on the secondary side, this can damage or destroy the LED. Faulty installation may void warranty. When installing in wet areas, the driver must be placed in a dry zone.