



# INDULINE 67

## Installation manual

### INDULINE 67 M

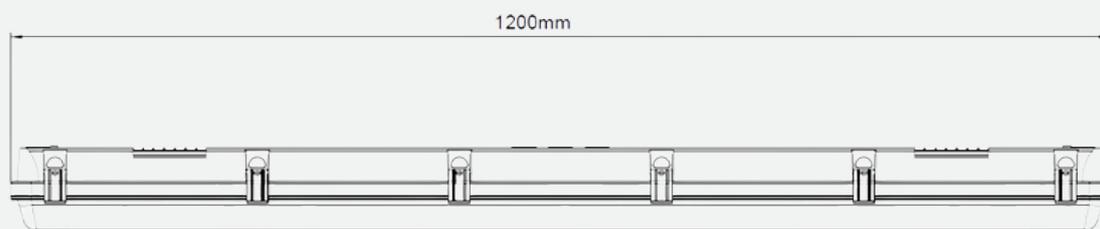









### INDULINE 67 L

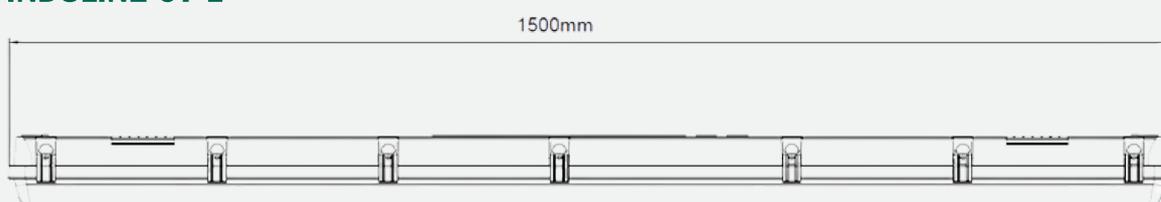

	INDULINE 67 M	INDULINE 67 L
<b>Luminous flux</b>	6150 lm	10000 - 15000 lm
<b>Consumption</b>	40 W	70 - 100 W
<b>Input voltage</b>	AC198-264V 50/60 Hz	
<b>CCT, CRI</b>	CCT 4000K; RA>80	
<b>Dimensions</b>	1200 x 127 x 94 mm	1500 x 127 x 94 mm
<b>Net weight</b>	3.2 kg	3.6 kg
<b>Ambient temperature range</b>	-25° .... +50° C	-40° .... +50° C
<b>Ambient humidity range</b>	15%~90%RH	

# INDULINE 67

## Mounting

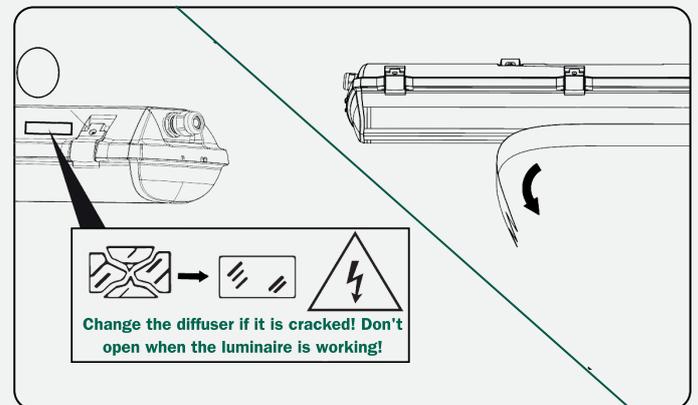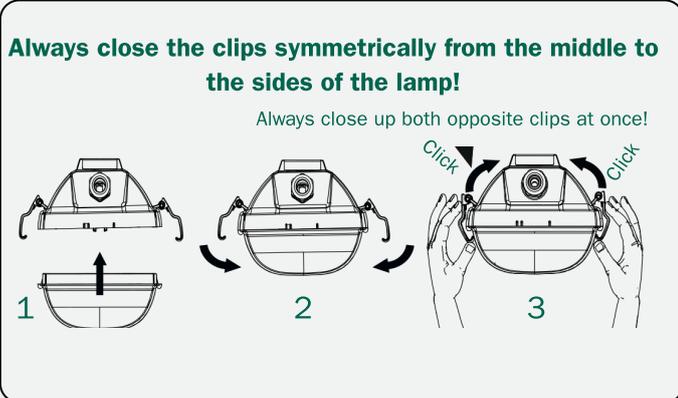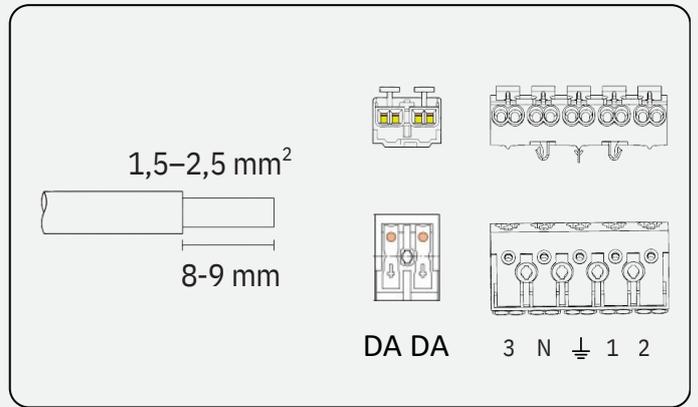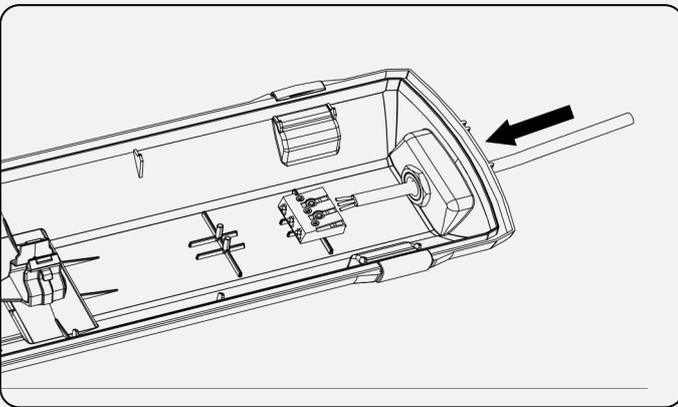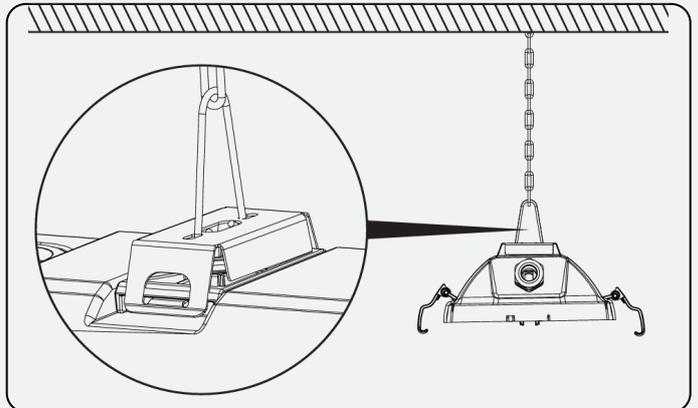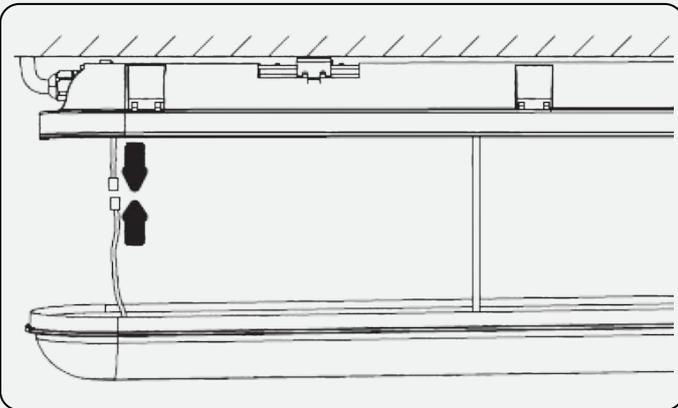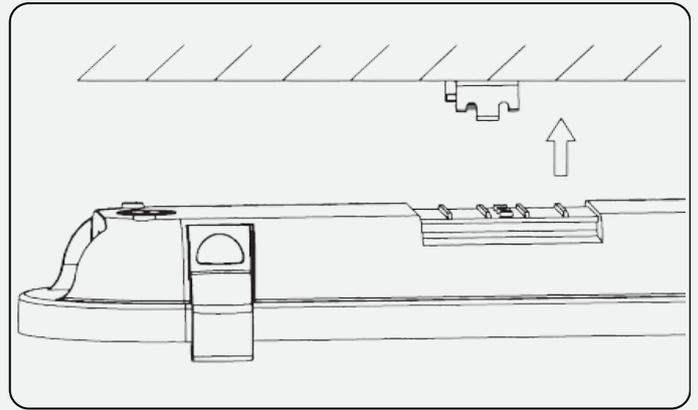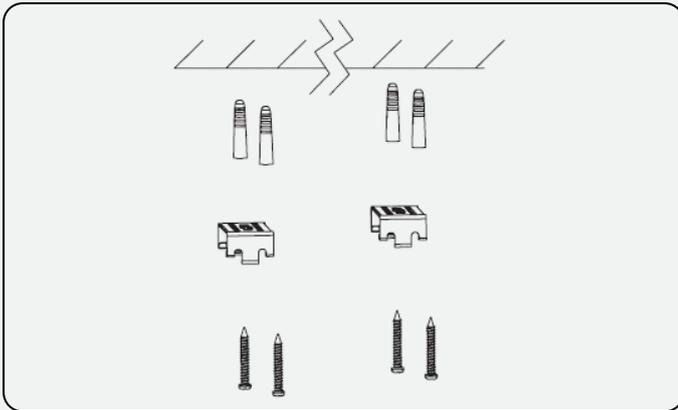

# INDULINE 67

**SAFETY AND INSTALLATION INSTRUCTIONS** Read these instructions carefully before commencing installation and retain for future reference. The luminaire should be installed by a licensed electrician and in accordance with local regulations. Make sure that the power is off before installation or maintenance. Install as described in this manual. **To maximize life span, install the luminaires and the drivers as far away from heat sources as possible and in a well ventilated area.** Use the supplied cable and driver for best function and safety.

**NOTE:** The light source in this luminaire may only be replaced by the manufacturer or by qualified personnel designated by the manufacturer. Never regulate the power on the secondary side, this can damage or destroy the LED. Faulty installation may void warranty. When installing in wet areas, the driver must be placed in a dry zone.