



LINUM

Installation manual

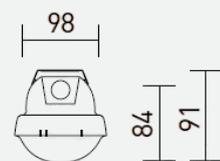









	A	D
S	615	110-370
M	1175	700-960
L	1455	970-1230

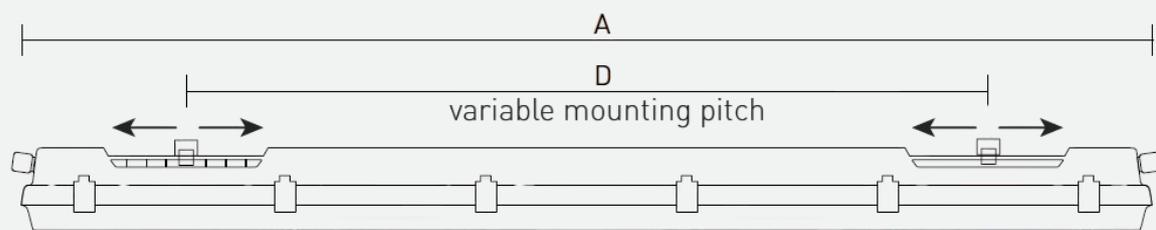

	LINUM S	LINUM M	LINUM L
Luminous flux	1510-2160 lm	3010-7510 lm	3750-9510 lm
Consumption	10-40 W	20-49 W	24-62 W
Input voltage	AC220-240V 50/60 Hz		
CCT, CRI	CCT 4000K; CRI>80		
Dimensions	615 x 95 x 111 mm	1175 x 95 x 111 mm	1455 x 95 x 111 mm
Net weight	0.9 kg	1.7 kg	2 kg
Ambient temperature range	-25° +45-50° C	-25° +35-50° C	-25° +35-50° C
Ambient humidity range	15%~90%RH		

LINUM

Mounting

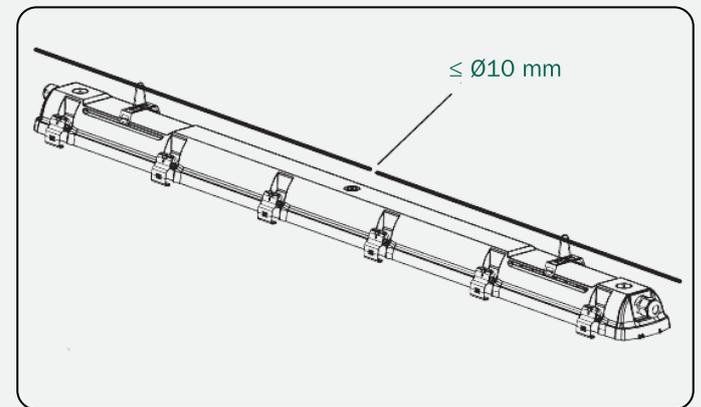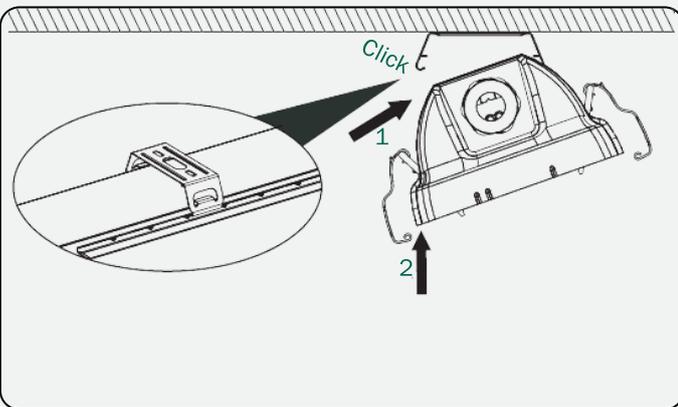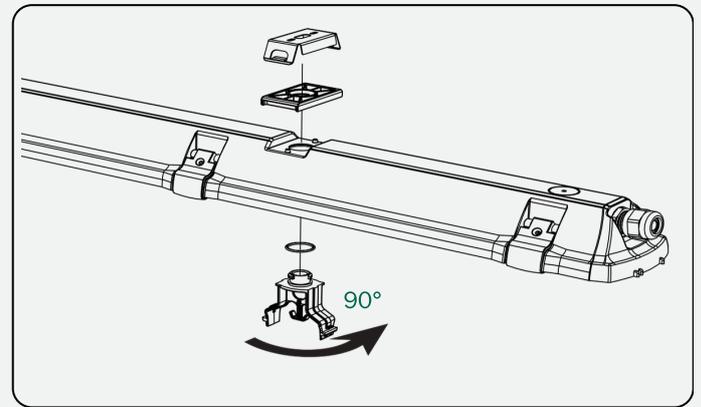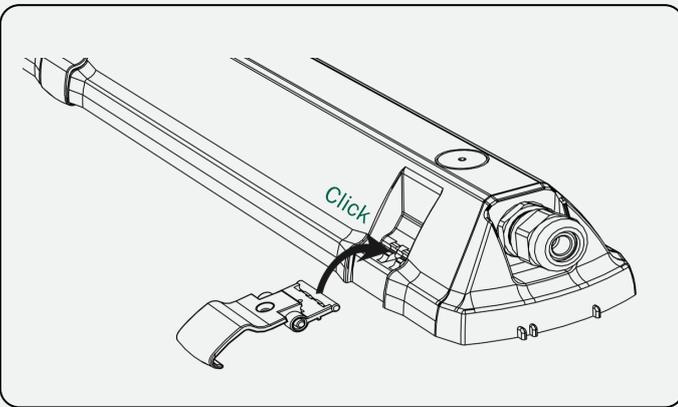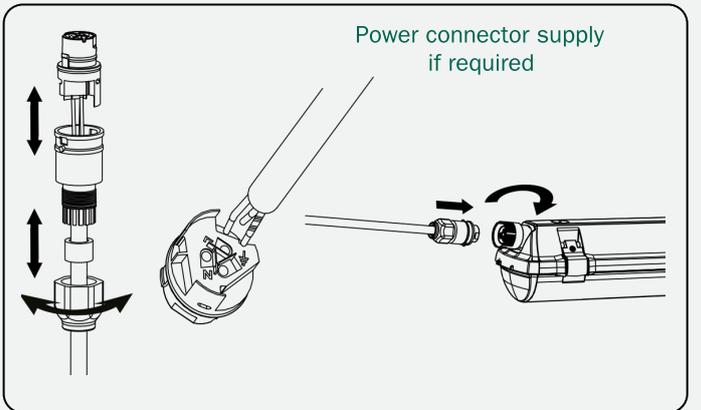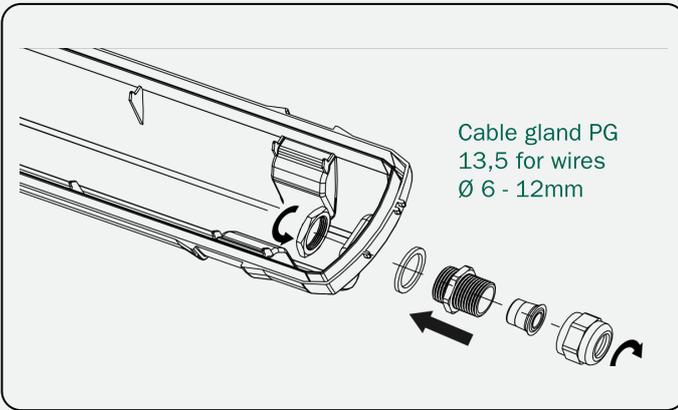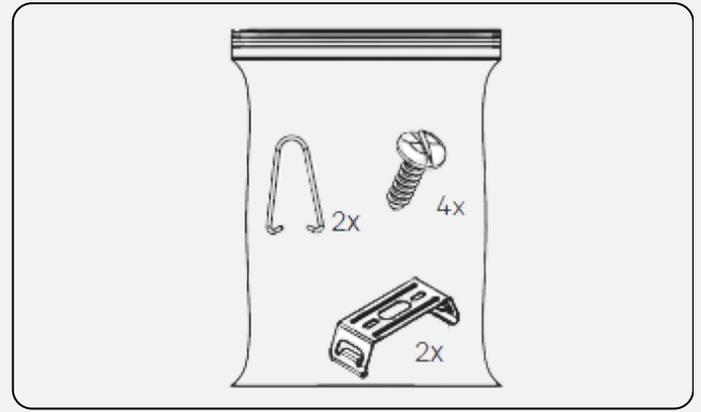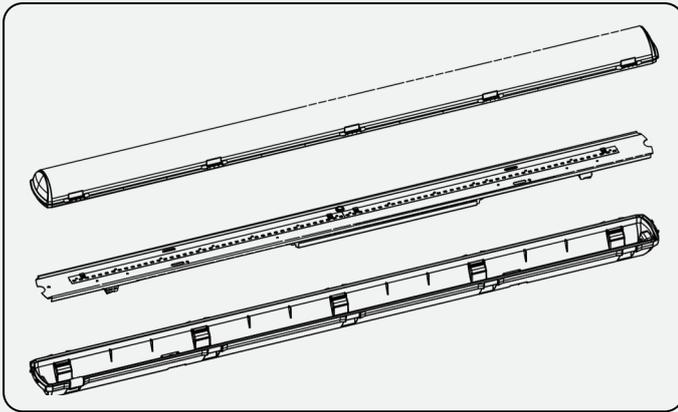

LINUM

Mounting








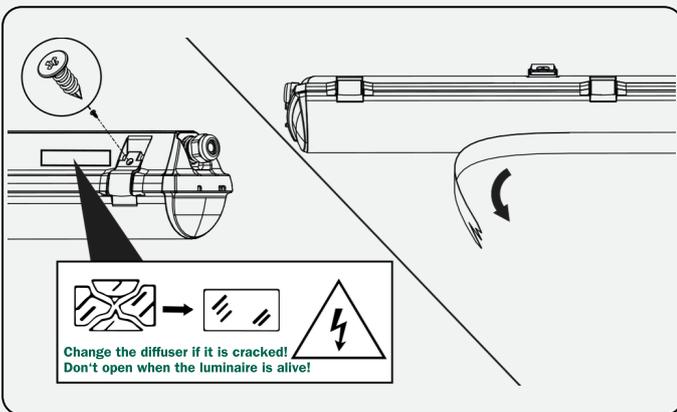


Table of maximal number of luminaires in one line				10A B	16A B	10A C	16A C
Length	Σlm	Σlm	Σlm	Σ luminaires	Σ luminaires	Σ luminaires	Σ luminaires
662	1300	1600	2200	32	50	52	85
1272	2600			32	50	52	85
1272	3200	4400	6400	10	16	16	26
1572	3250	4000	5500	10	16	16	26
1572	8000			10	16	16	26

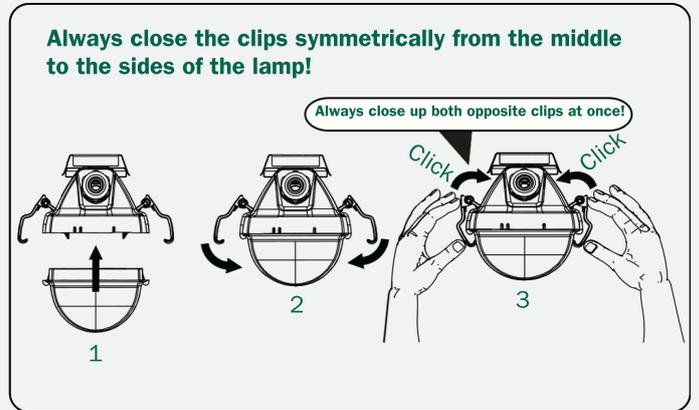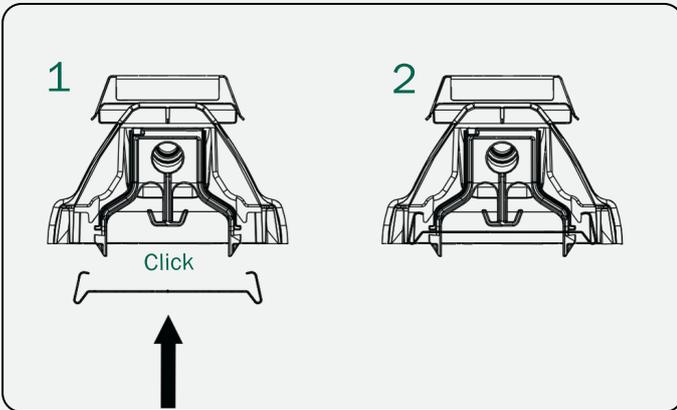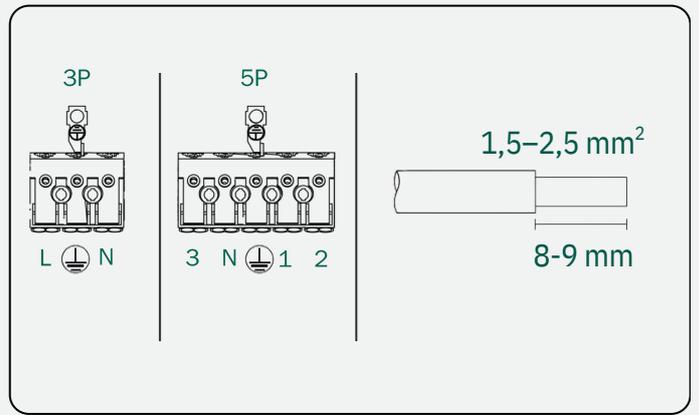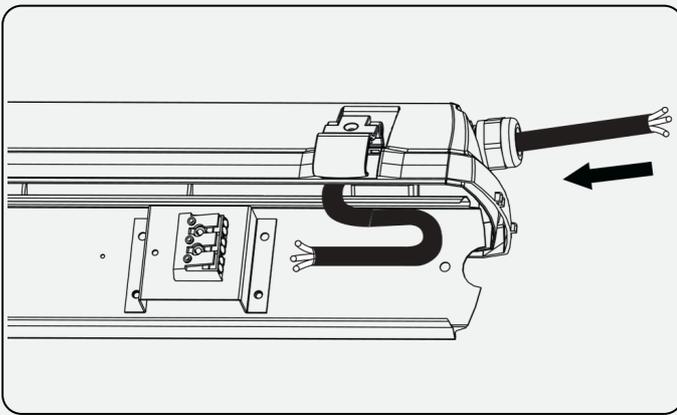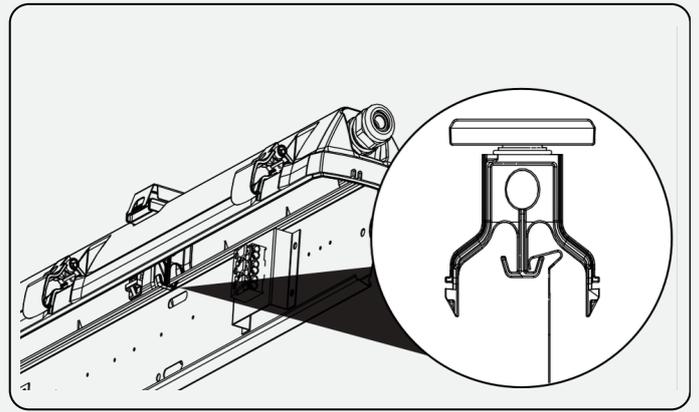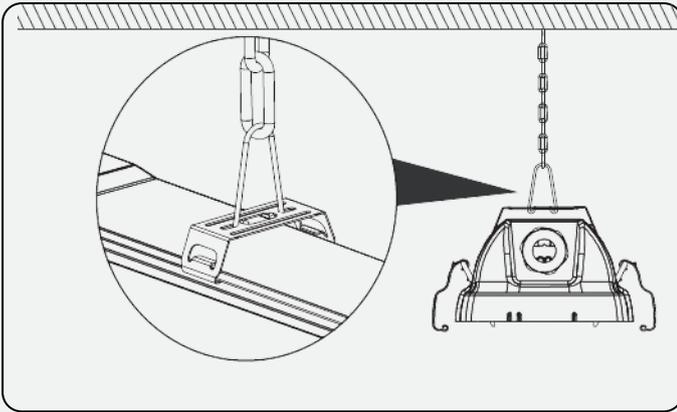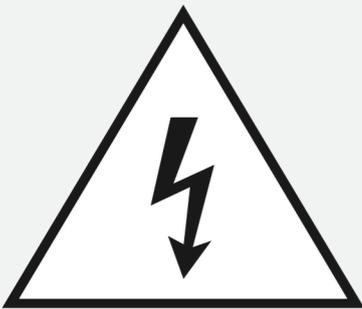

The light source in this luminaire may be replaced only by the manufacturer or its contractual service technician or similarly qualified person!

SAFETY AND INSTALLATION INSTRUCTIONS Read these instructions carefully before commencing installation and retain for future reference. The luminaire should be installed by a licensed electrician and in accordance with local regulations. Make sure that the power is off before installation or maintenance. Install as described in this manual.

To maximize life span, install the luminaires and the drivers as far away from heat sources as possible and in a well ventilated area. Use the supplied cable and driver for best function and safety.

NOTE: The light source in this luminaire may only be replaced by the manufacturer or by qualified personnel designated by the manufacturer. Never regulate the power on the secondary side, this can damage or destroy the LED. Faulty installation may void warranty. When installing in wet areas, the driver must be placed in a dry zone.

For well installation and good luminaire work is necessary ensure a planarity of a mounting surface. Do not use the luminaire if damaged or if damaged the power cable. Only damp micro ber cloth can be used for cleaning. Technical changes are subjected without notice. Do not dispose the luminaire or its parts as household waste, but make the proper recycling.