





# VELA

## Installation manual



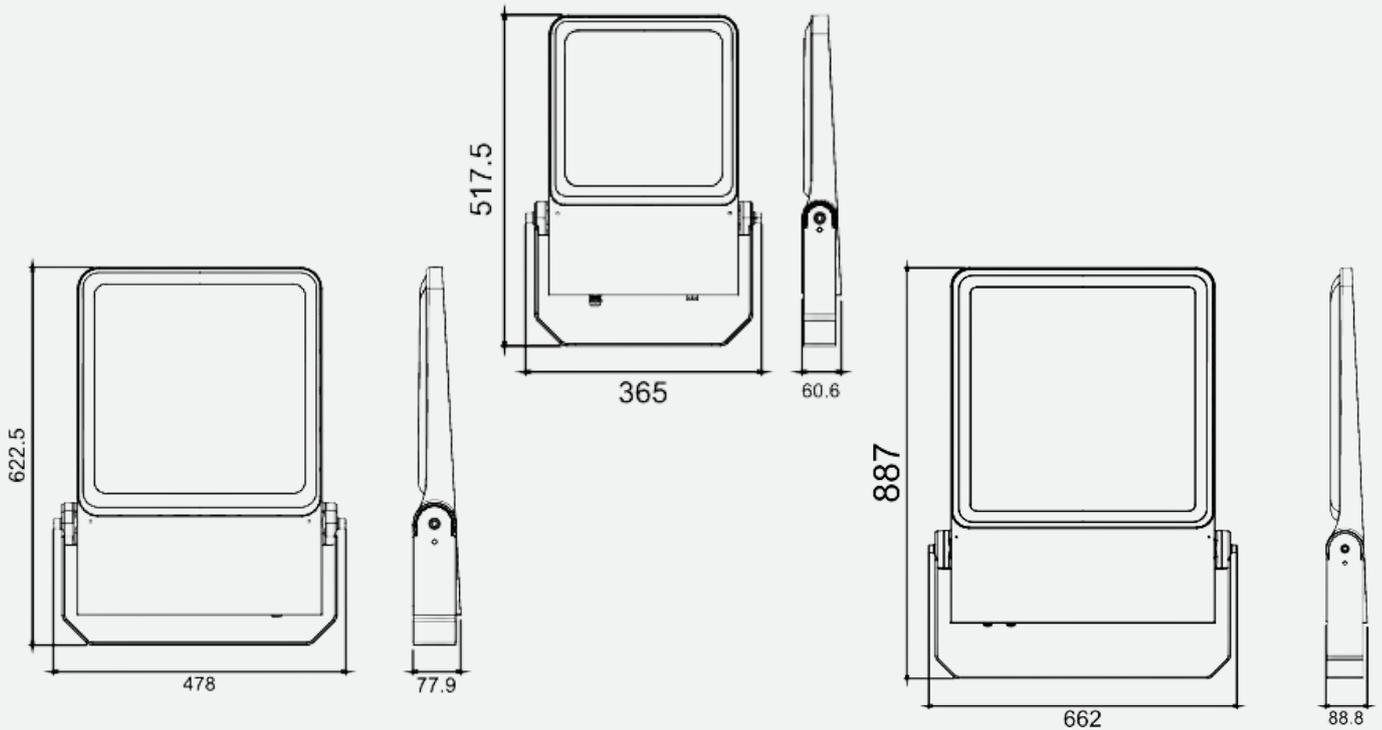


	VELA S	VELA M	VELA L
<b>Consumption</b>	50 - 150 W	200 - 300 W	400 - 800 W
<b>Luminous flux</b>	7500 - 23700 lm	32800 - 50100 lm	66000 - 116000 lm
<b>Rated voltage</b>	AC100-240V 50/60 Hz		
<b>CCT, CRI</b>	CCT 3000K/4000K; RA>70		
<b>Dimensions</b>	517.5 x 365 x 60.6 mm	622.5 x 478 x 77.9 mm	887 x 662 x 88.8 mm
<b>Working temperature</b>	-40° .... +40° C		
<b>Net weight</b>	5.9 kg	10.3 kg	22.1 kg
<b>Ambient humidity range</b>	15%~90%RH		

## Holder options

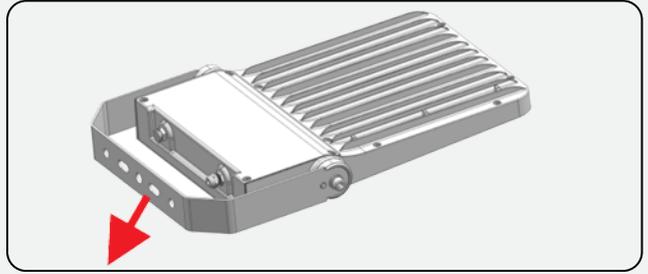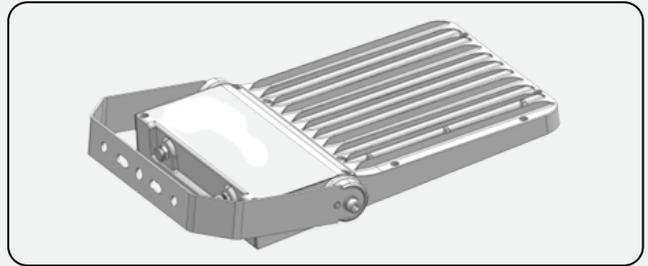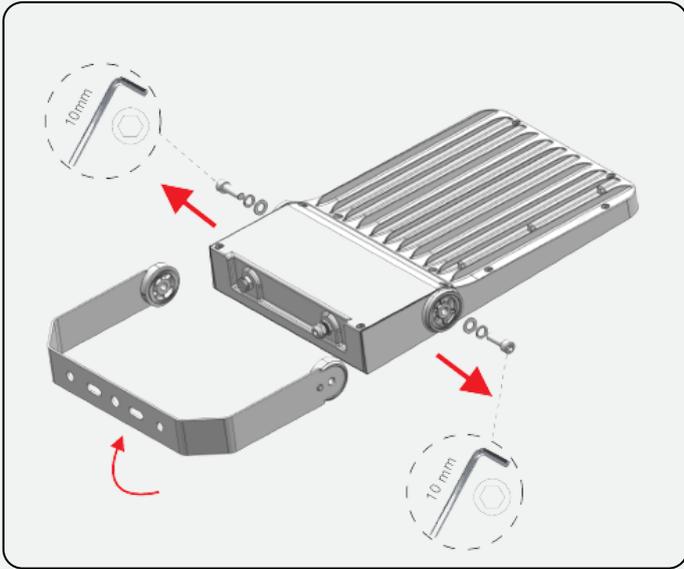

## Dimensions of the mounting bracket

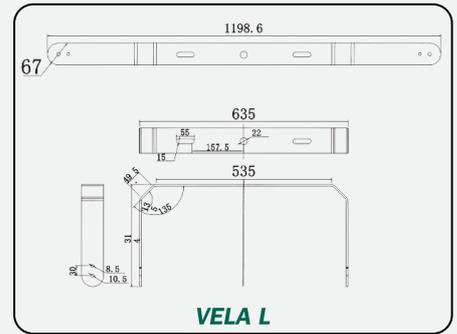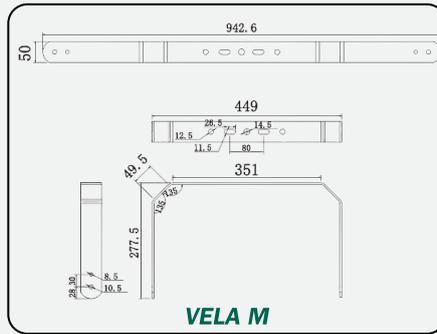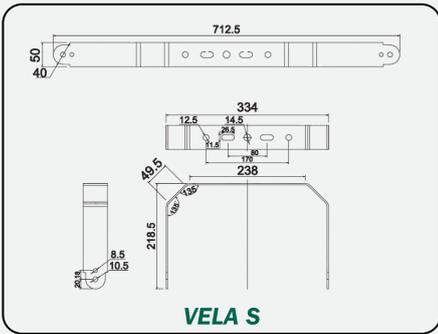

## Wiring diagram


<b>Phase</b>		brown
<b>Neutral</b>		blue
<b>Earth</b>		yellow & green

\*NOTE! Ground connection applies to protection class I luminaires.



Warning, risk of electric shock.

### A. Class I Standard

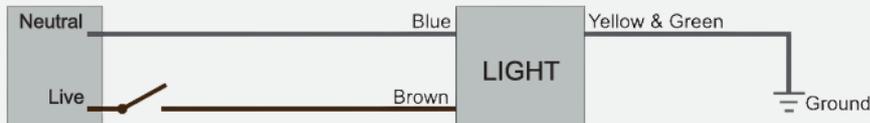

### A. Class II Standard



## Wiring:

1. Connect supply wires to luminaire wire leads per the wiring diagram using methods that comply with all applicable codes.
2. Turn power on.

**The luminaire shall only be repaired or maintained by the manufacturer or his service agent or a qualified electrician.**

**SAFETY AND INSTALLATION INSTRUCTIONS** Read these instructions carefully before commencing installation and retain for future reference. The luminaire should be installed by a licensed electrician and in accordance with local regulations. Make sure that the power is off before installation or maintenance. Install as described in this manual. **To maximize life span, install the luminaires and the drivers as far away from heat sources as possible and in a well ventilated area.** Use the supplied cable and driver for best function and safety.

**NOTE:** The light source in this luminaire may only be replaced by the manufacturer or by qualified personnel designated by the manufacturer. Never regulate the power on the secondary side, this can damage or destroy the LED. Faulty installation may void warranty. When installing in wet areas, the driver must be placed in a dry zone.