


# VELA BASIC


## Installation manual

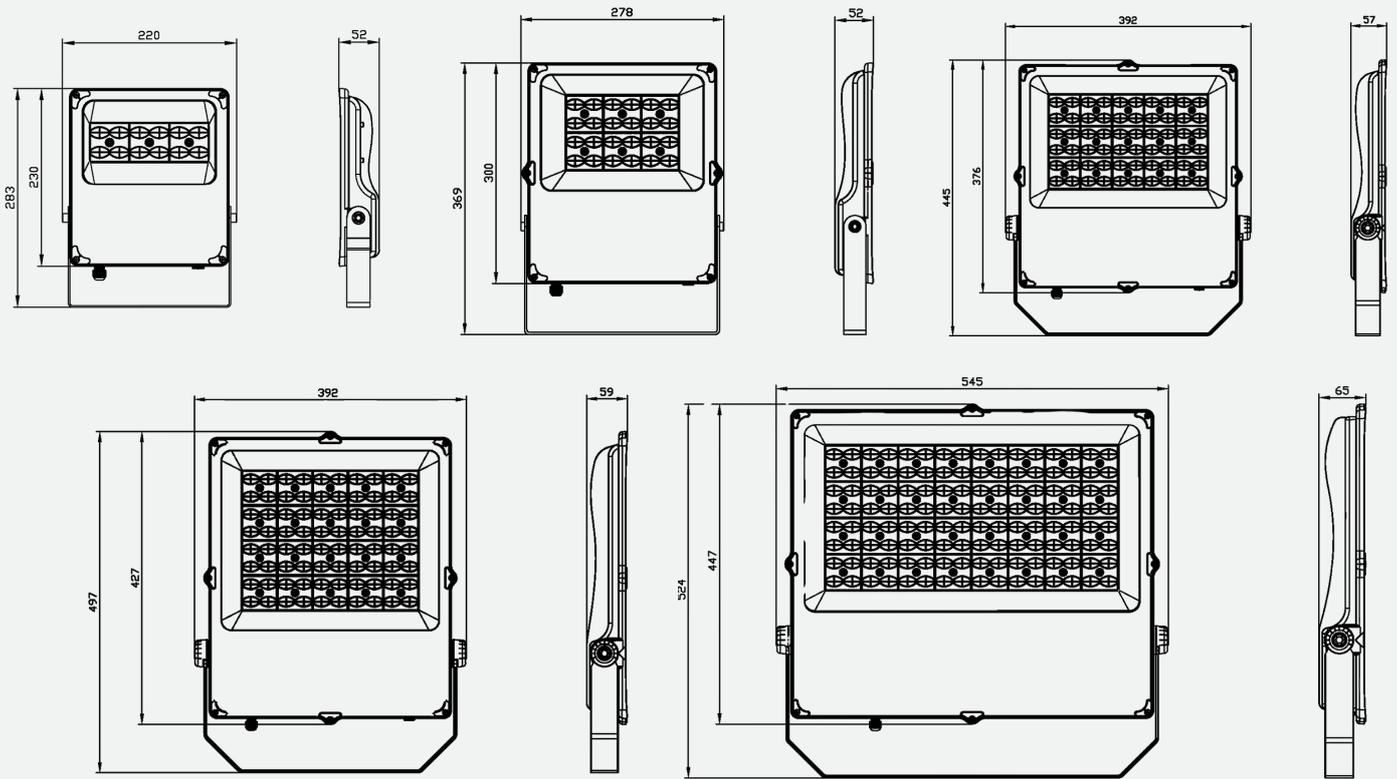

	VELA BASIC XS	VELA BASIC S	VELA BASIC M	VELA BASIC L	VELA BASIC XL
<b>Consumption</b>	20 - 40 W	80 W	120 - 150 W	200 - 240 W	300 W
<b>Luminous flux*</b>	2910 - 5610 lm	11840 lm	16920 - 21300 lm	28600 - 33600 lm	45300 lm
<b>Rated voltage</b>	AC100-240V 50/60 Hz				
<b>CCT, CRI</b>	CCT 3000K/4000K; RA>70				
<b>Working temperature</b>	-40° .... +40° C				
<b>Net weight</b>	2.3 kg	4.2 kg	5.2 kg	7 kg	10.2 kg
<b>Ambient humidity range</b>	10%~90%RH				

\*With F414 optics

### Wiring diagram

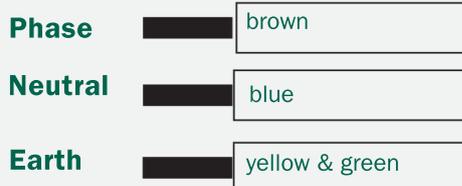

\*NOTE! Ground connection applies to protection class I luminaires.






Warning, risk of electric shock.





# VELA BASIC

## Holder options

1. Fix the mounting bracket.
2. Adjust the desired angle on the luminaire housing.
3. Fasten the screws through the mounting bracket and into the fixture housing.
4. Connect the cables:  
Brown=L  
Blue=N  
Yellow-green= G (protective earth)

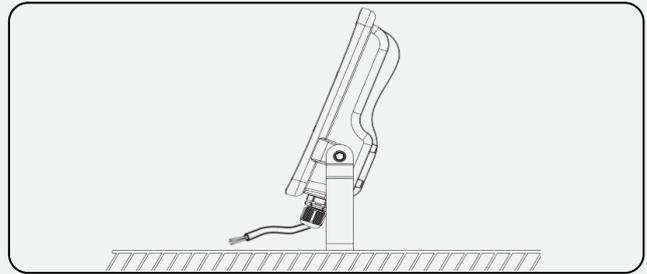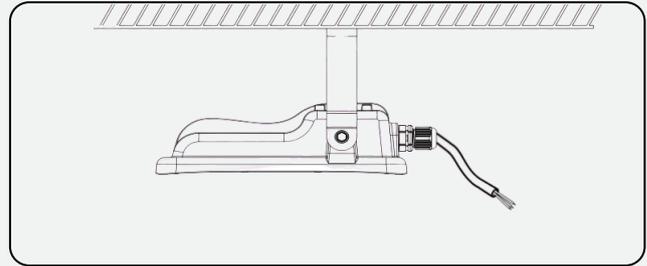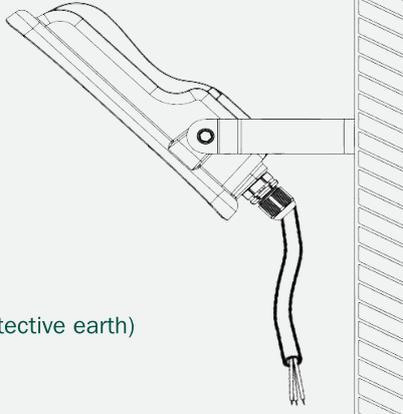

## Dimensions of the mounting bracket

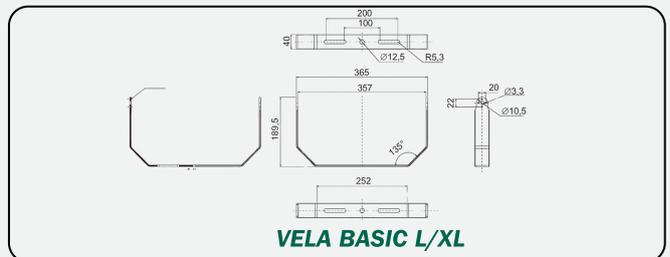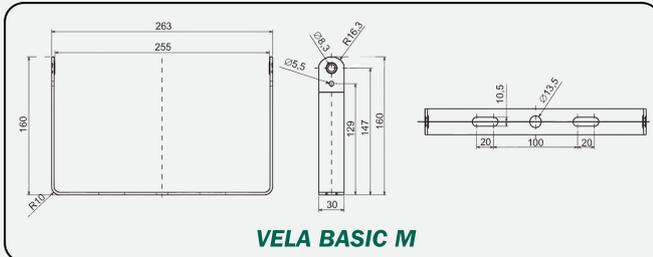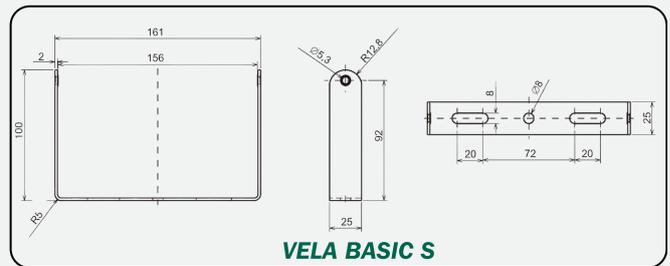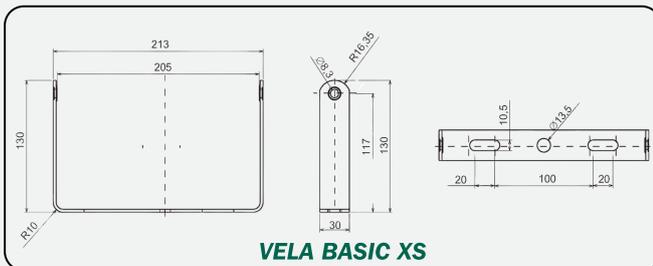

**SAFETY AND INSTALLATION INSTRUCTIONS** Read these instructions carefully before commencing installation and retain for future reference. The luminaire should be installed by a licensed electrician and in accordance with local regulations. Make sure that the power is off before installation or maintenance. Install as described in this manual. **To maximize life span, install the luminaires and the drivers as far away from heat sources as possible and in a well ventilated area.** Use the supplied cable and driver for best function and safety.

**NOTE:** The light source in this luminaire may only be replaced by the manufacturer or by qualified personnel designated by the manufacturer. Never regulate the power on the secondary side, this can damage or destroy the LED. Faulty installation may void warranty. When installing in wet areas, the driver must be placed in a dry zone.