


FORNAX

Installation manual

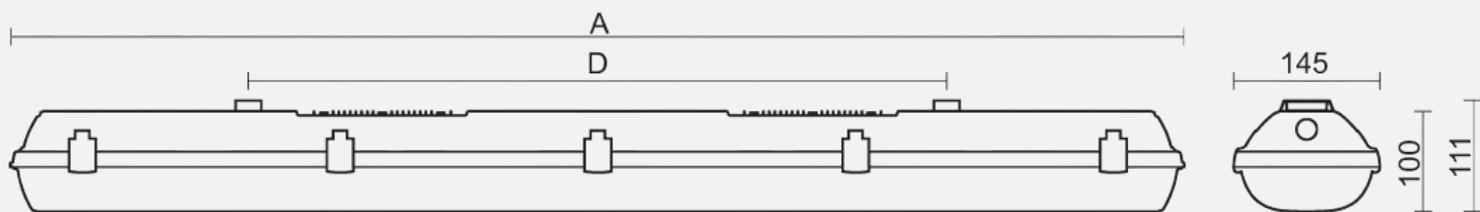









	A	D
S	612	475
M	1172	700
L	1452	940



	FORNAX S	FORNAX M	FORNAX L
Luminous flux	3040-4410 lm	6100-12120 lm	7890-15100 lm
Consumption	20-28 W	37-84 W	46-92 W
Input voltage	AC220-240V 50/60 Hz		
CCT, CRI	CCT 4000K; CRI>80		
Dimensions	612 x 145 x 111 mm	1172 x 145 x 111 mm	1452 x 145 x 111 mm
Net weight	1.5 kg	3 kg	3 kg
Ambient temperature range	-25° +45-50° C	-25° +35-50° C	-25° +35-50° C
Ambient humidity range	15%~90%RH		

FORNAX

Mounting

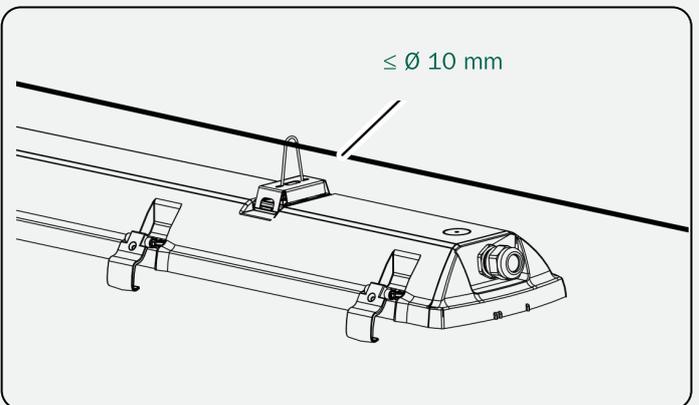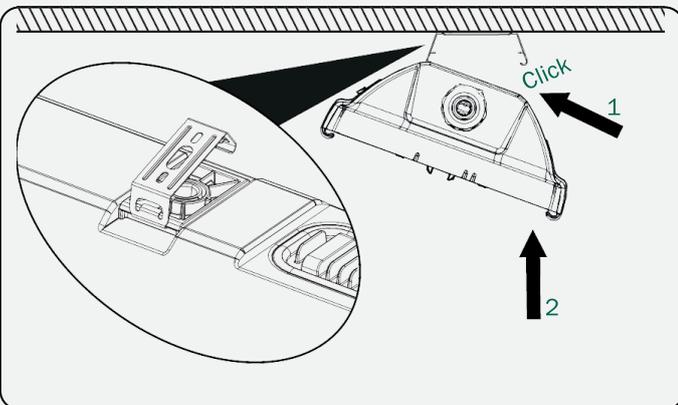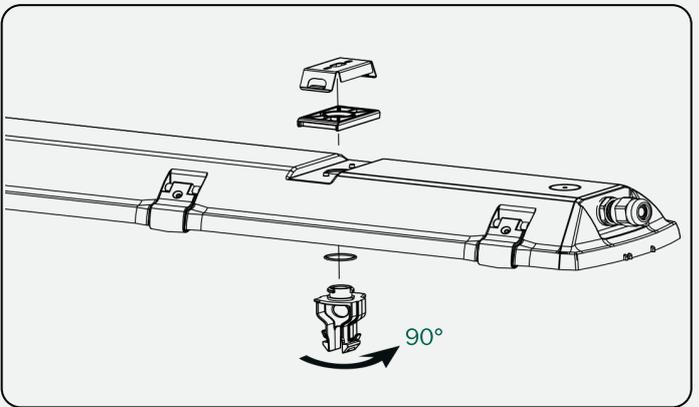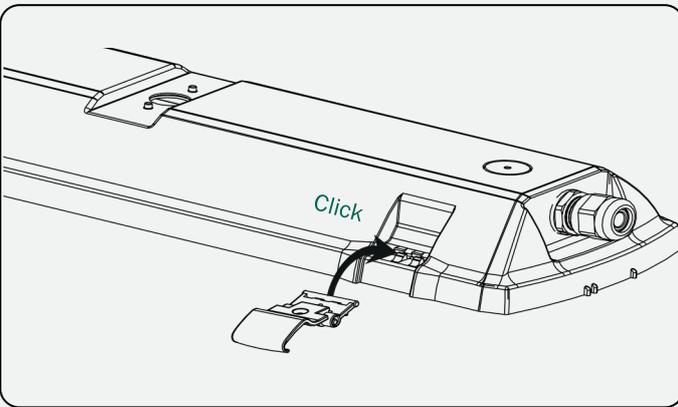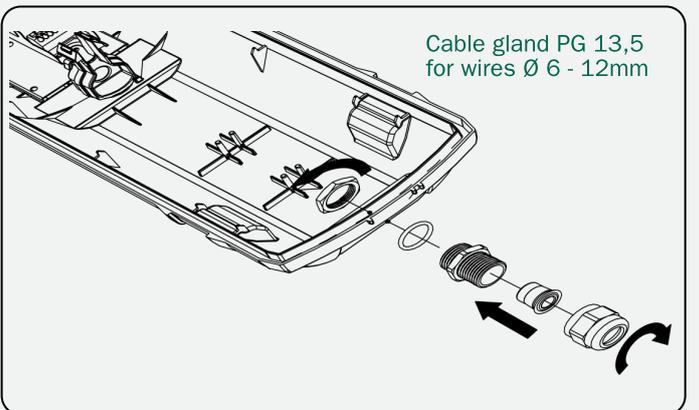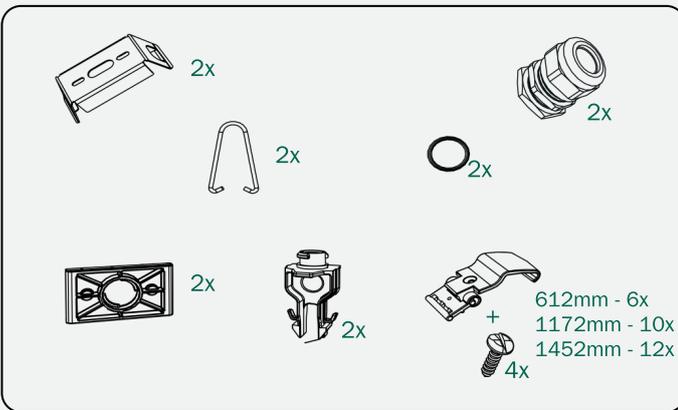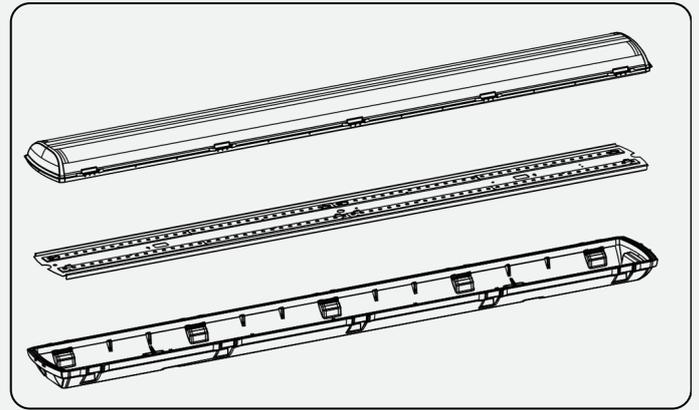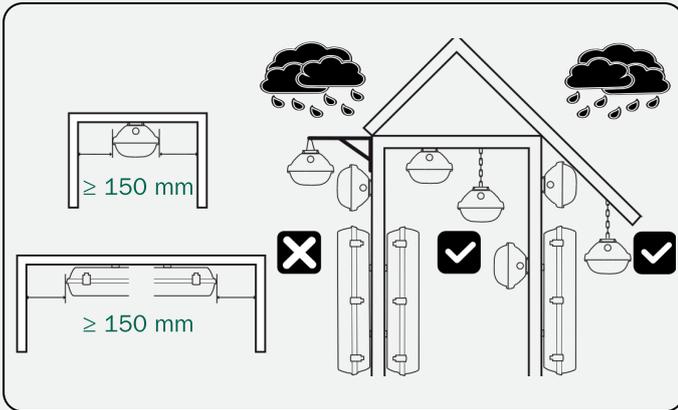

FORNAX

Mounting








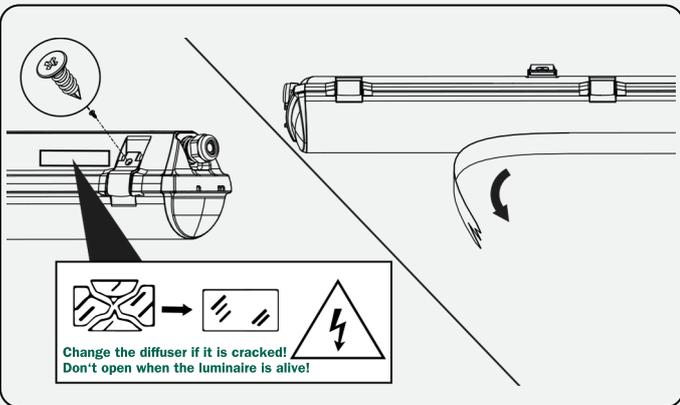


Table of maximal number of luminaires in one line				10A B Σ luminaires	16A B Σ luminaires	10A C Σ luminaires	16A C Σ luminaires
Length	Σlm	Σlm	Σlm				
612	2600			32	50	52	85
612	3200	4400		10	16	16	26
1172	5200	6400	8800	10	16	16	26
1172	12800			11	18	18	30
1452	6500	8000	11000	10	16	16	26
1452	16000			11	18	18	30

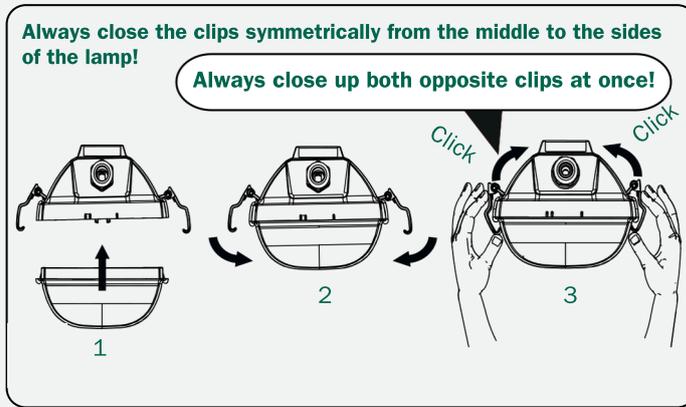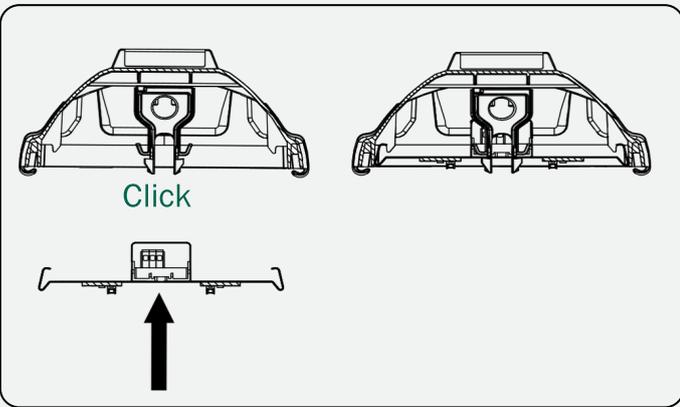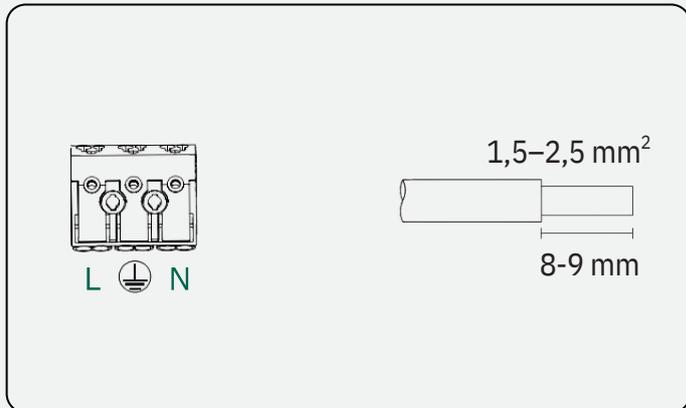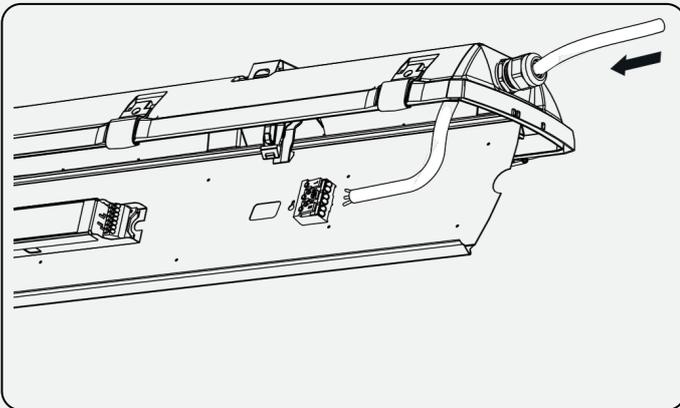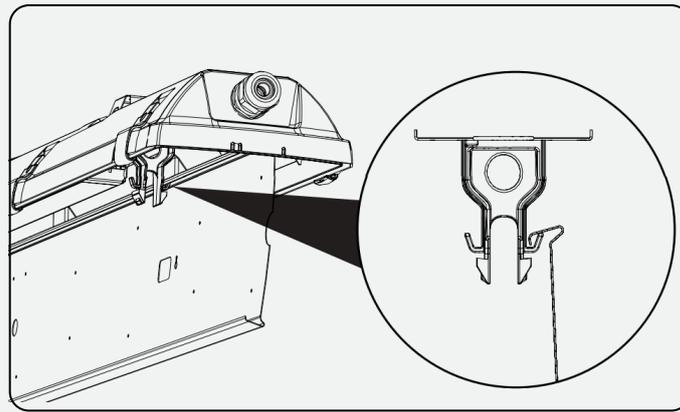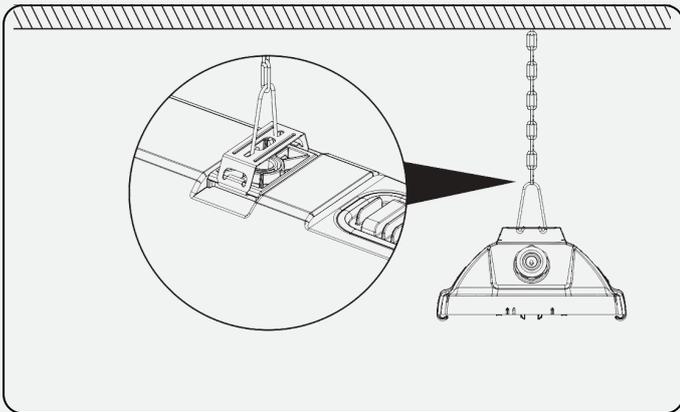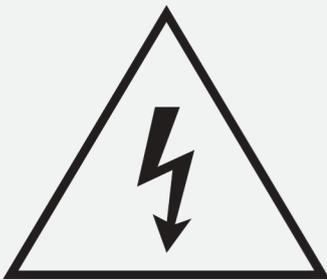

The light source in this luminaire may be replaced only by the manufacturer or its contractual service technician or similarly qualified person!

SAFETY AND INSTALLATION INSTRUCTIONS Read these instructions carefully before commencing installation and retain for future reference. The luminaire should be installed by a licensed electrician and in accordance with local regulations. Make sure that the power is off before installation or maintenance. Install as described in this manual.

To maximize life span, install the luminaires and the drivers as far away from heat sources as possible and in a well ventilated area. Use the supplied cable and driver for best function and safety.

NOTE: The light source in this luminaire may only be replaced by the manufacturer or by qualified personnel designated by the manufacturer. Never regulate the power on the secondary side, this can damage or destroy the LED. Faulty installation may void warranty. When installing in wet areas, the driver must be placed in a dry zone.

For well installation and good luminaire work is necessary ensure a planarity of a mounting surface. Do not use the luminaire if damaged or if damaged the power cable. Only damp micro ber cloth can be used for cleaning. Technical changes are subjected without notice. Do not dispose the luminaire or its parts as household waste, but make the proper recycling.